


## INSTALLATION MANUAL FOR 7" DIGITAL MONITOR WITH 60° TIPPING HOLDER

### 1. Material needed for installation



FMS5723

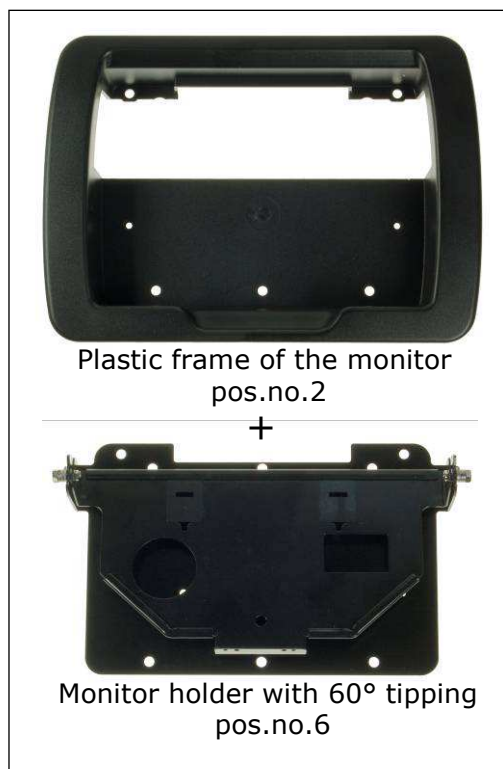

FMS5723-HH-60



068988-M

Secondary arrestment - pos.no.7

### 2. Tools needed for installation:



Screwdriver PH2



Screwdriver PH0



Date 27/07/2011

Page 1 / 5

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1218, 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.sk, www.molpir.sk

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/11 00, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Železniční 469/4, 772 00 Olomouc, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: molpir\_o@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz

IČO: 25828843, DIČ: 379-25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

NM\_FMS5723\_002\_27072011\_EN

### 3. Installation procedure


Step 1: Insert metal holder of the monitor into the seat (pos.no.6) and fix it with 3 screws M5 x 10mm (pos.no.3) through holes marked with rings.



Figure 1 – Fixation of the hinge on the seat with screws

Step 2: Installation of the monitor cabling:

- 1) Connect the cabling (pos.no.5) (FMS-CA04-.....) into the monitor connector
- 2) Insert the cabling (pos.no.5) into the groove on the rear side of the monitor
- 3) Apply the adhesive tape to avoid that the cabling fall out from the groove

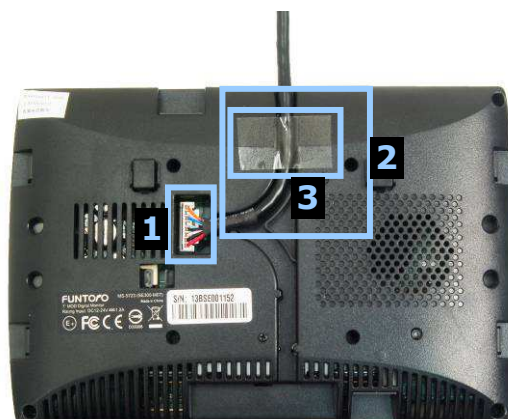

## Step 3: Placing monitor on the holder

- 1) Direct hooks on the rear side of monitor to the T-holes in the holder (pos.no.6) and the monitor (pos.no.1) push down as much as possible.

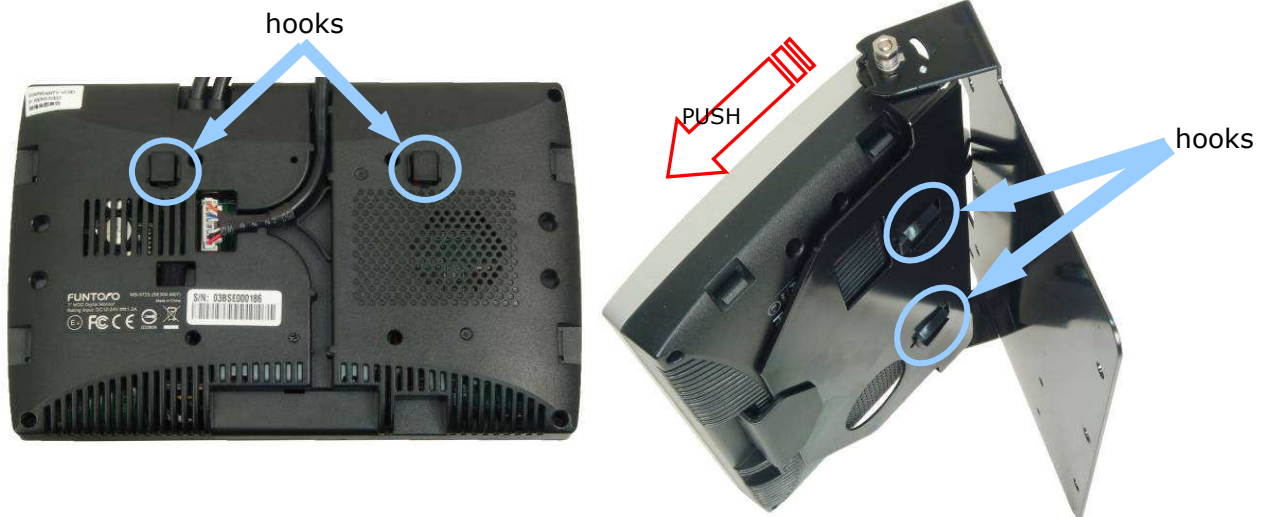


Figure 3 – Hanging of monitor on the hinge

- 2) Fix the monitor with two screws M2 x 6mm (pos.no.4) to the monitor holder

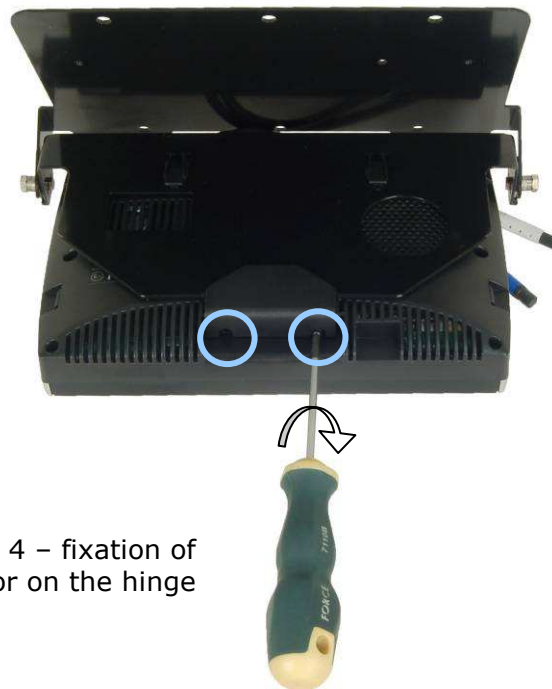


Figure 4 – fixation of monitor on the hinge



Date 27/07/2011

Page 3 / 5

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1218, 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.sk, www.molpir.sk

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/11 00, register: OS Trnava, odd: Sro, vlož: 1045/T

MOLPIR GROUP CZ a.s., Železniční 469/4, 772 00 Olomouc, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: molpir\_o@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz

IČO: 25828843, DIČ: 379-25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

NM\_FMS5723\_002\_27072011\_EN



Step 4: Insertion of AUX-IN and SPK-OUT cabling (only if necessary)

- 1) Connect connectors (male plug with female plug)
- 2) Insert connected connectors into the secondary arrestment (pos.no.7)
- 3) By closing of secondary arrestment the connection is secured against its unwanted disconnection



Figure 5 - AUX-IN and SPK-OUT cabling

Step 5: Installation of the plastic frame of the monitor

- 1) Tilt the monitor into 45° ~ 60° angle
- 2) Insert the plastic frame (pos.no.2) on the tipping monitor (pos.no.1) with the holder (pos.no.6)


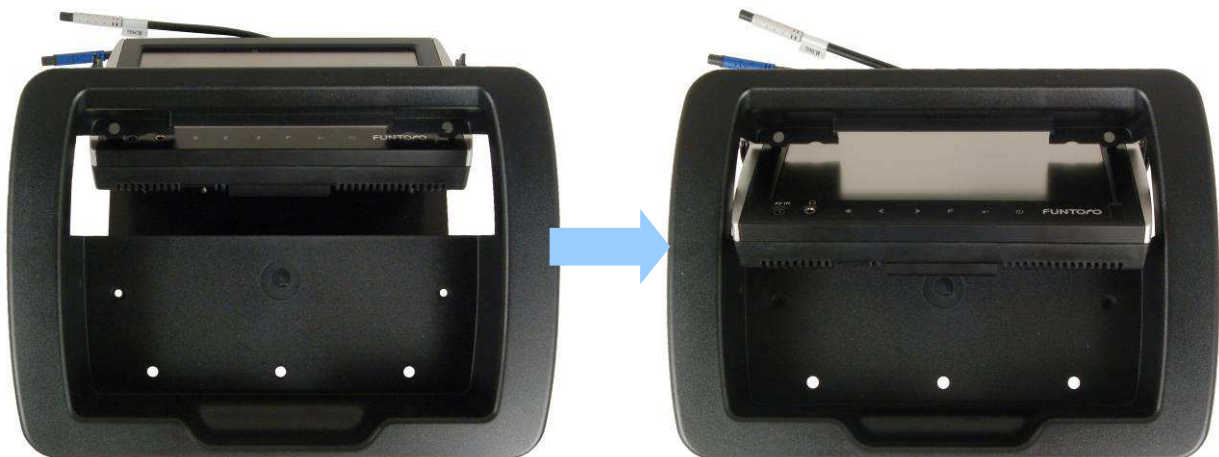


Figure 6 – Insert monitor with hinge into the frame

Step 6: Fixation of the plastic frame

- 1) Tilt the monitor and tighten 3 screws M5 x 10mm (pos.no.3) into the holes (marked with rings)

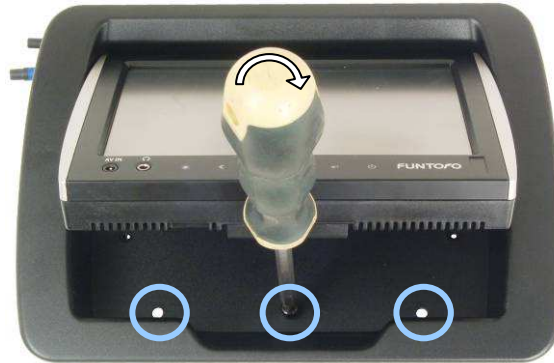

- 2) Give the monitor to the basic position, in the one line with the frame (pos.no.2) and tighten remaining 2 screws M5 x 10mm (pos.no.3) into the holes on the top of the frame, marked with rings.

