


FUNTOPO™

How to replace the earphone jack

2015/02/03

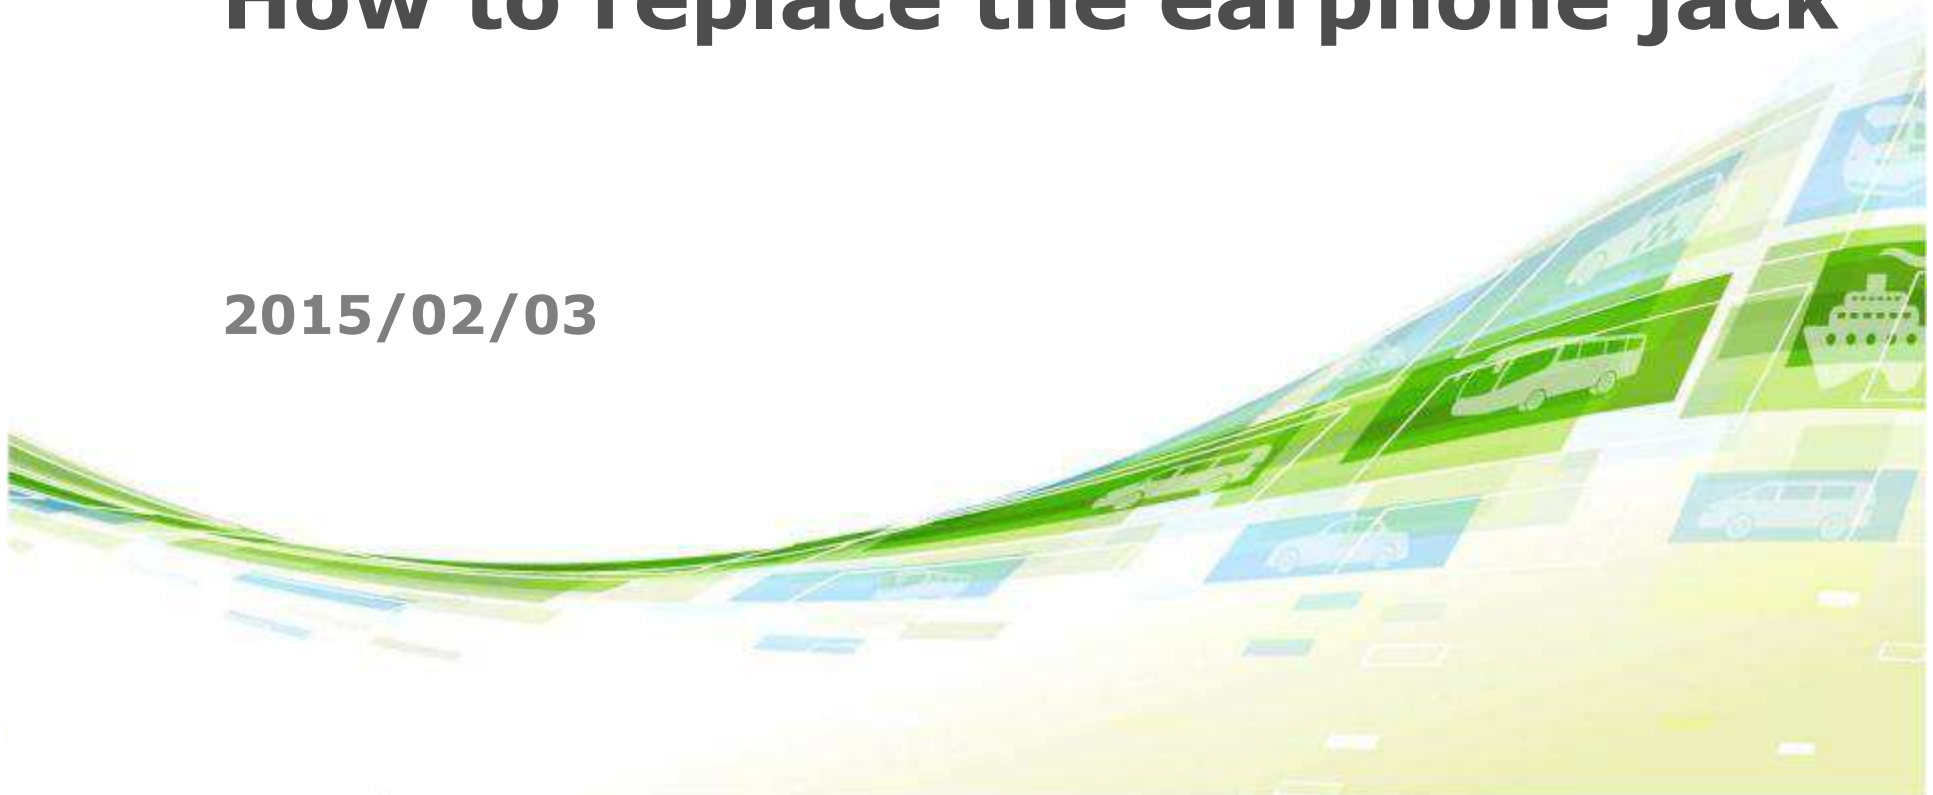


Step 1. Unscrew 4 screws by Philips screwdriver



Step 2. Open the back cover





Step 3. Unplug the earphone cable connector and coaxial cable connector in the PCBA.

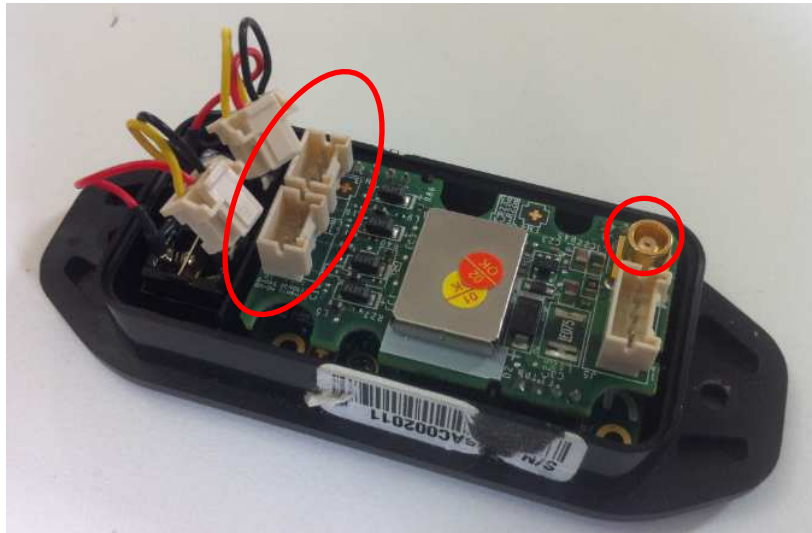



Step 4. Unscrew the lock screw of the earphone jack by tool.



Step 5. Cut the heat-shrinkable tube by cut pliers

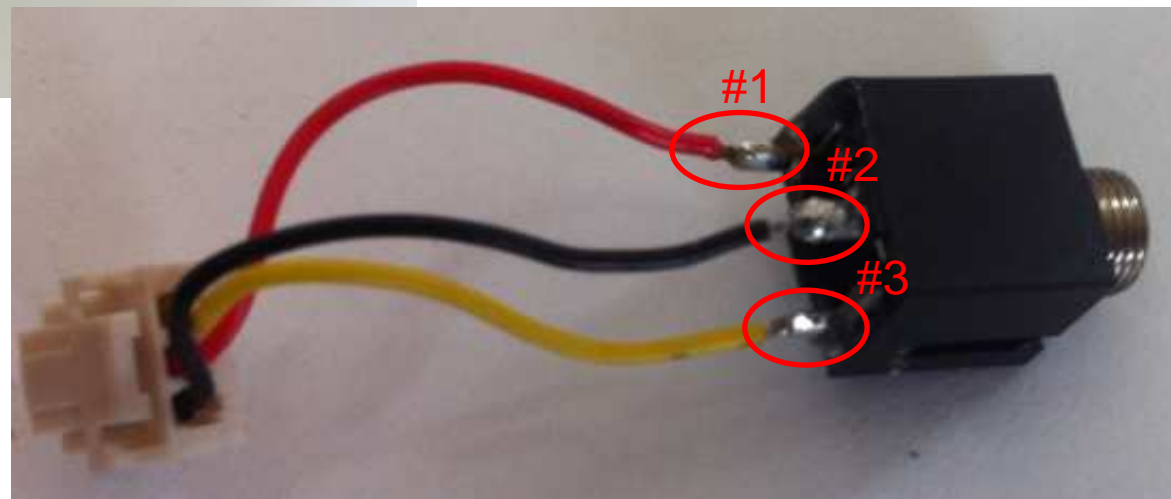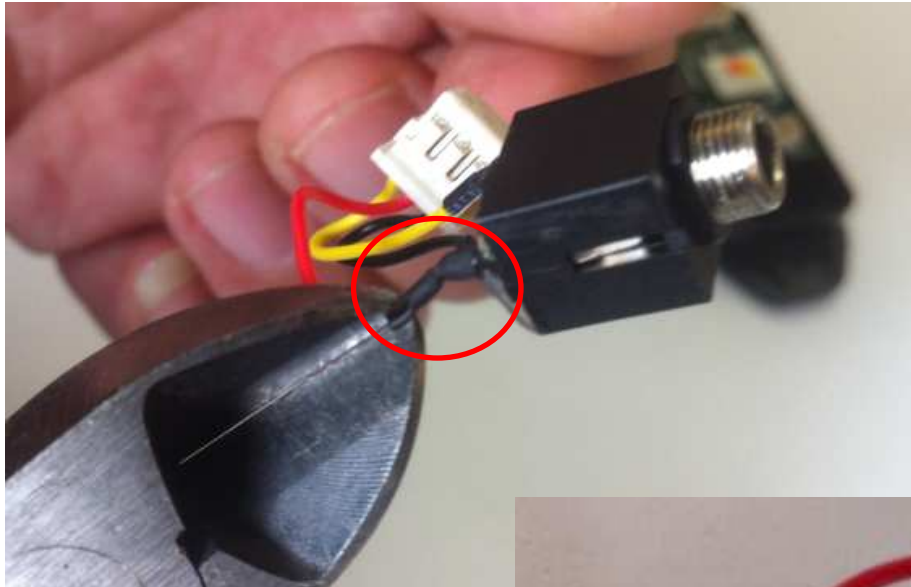


Step 6. De-soldering the earphone connects cable by soldering Tools

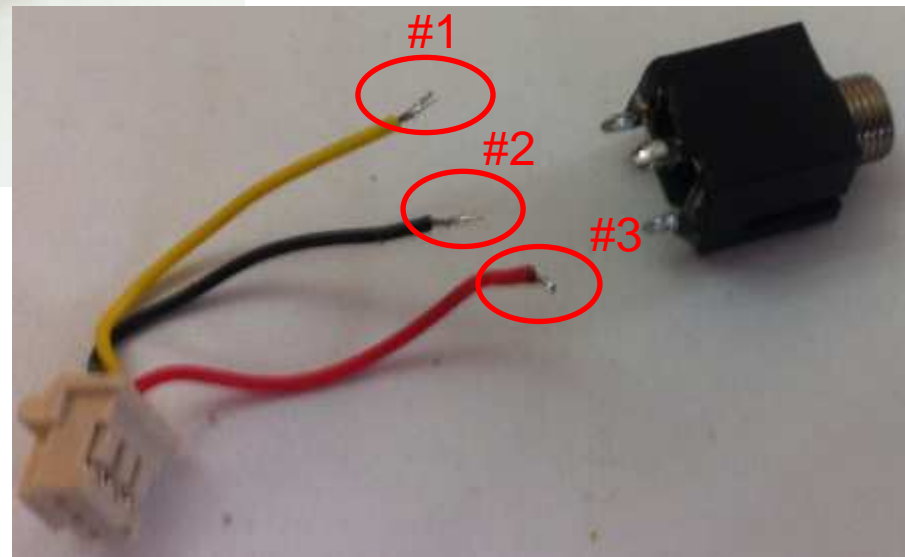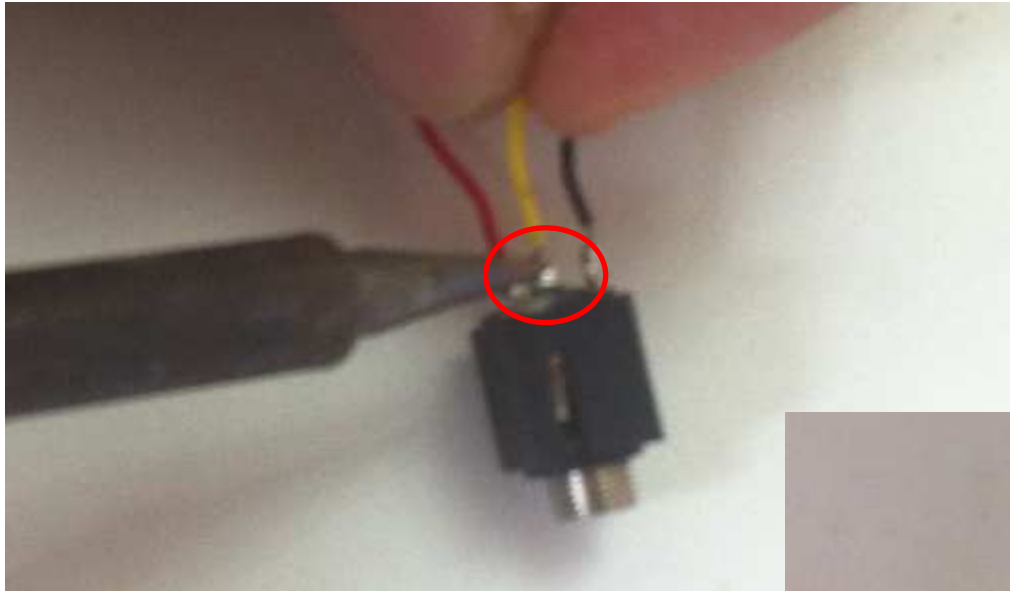

Step 7. Using the new heat-shrinkable tube and earphone and then soldering the cable with earphone jack.



Step 8. Using the heating gun to fix the heat-shrinkable tube.

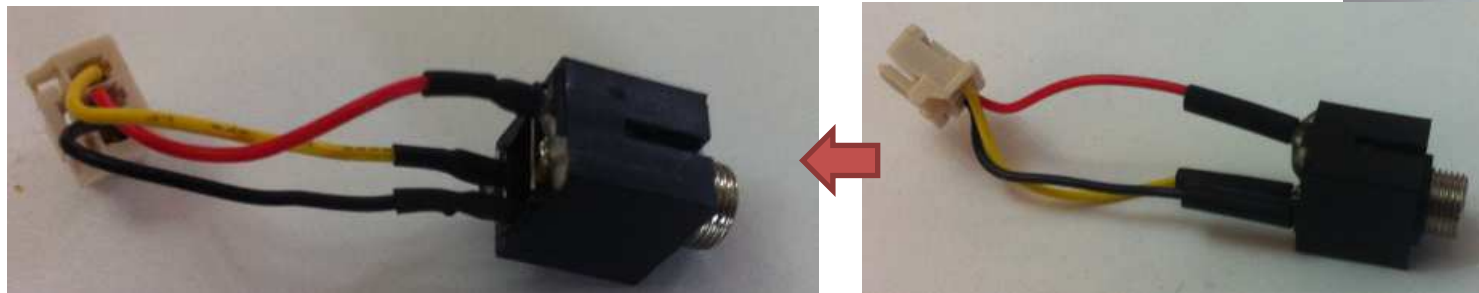


Step 9. Finishing the wire cable to avoid installing interference



Step 10. Mounted on the back cover and check the wire is exposed in the hole bits.



Step 11. Fixing 4 screws by Phillips screwdriver

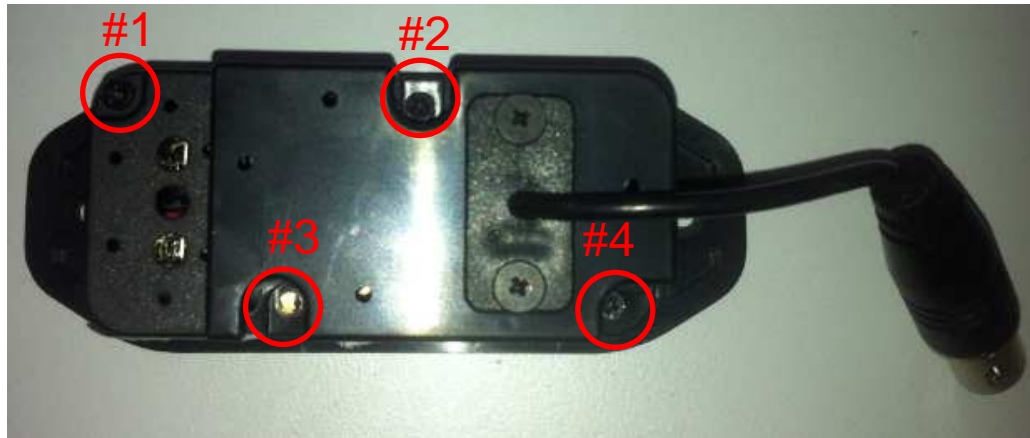

FUNTORO™ More than Expectation

**Thank you very much
for your attention**

