


Ord. code: **FMS037-H01IR**

Instalation of holder bracket and cover of Hub into seat in bus Irizar I8

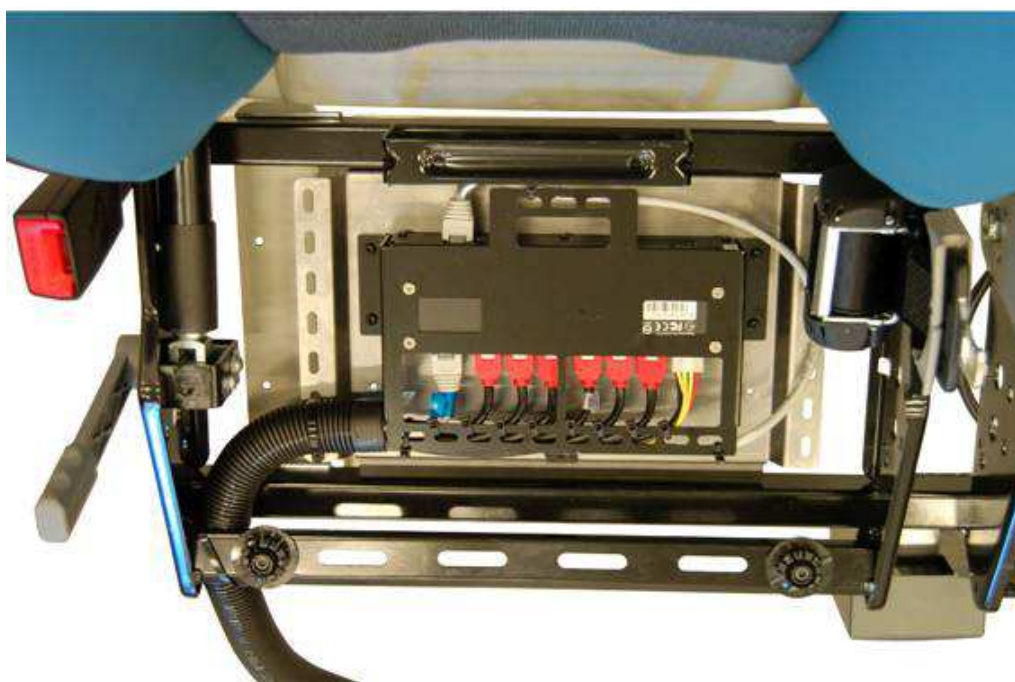

Date: 23.01.2016

Page 1 of 6

Molpir s.r.o. sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1219, Fax: 00421 2 4319 1220,
e-mail: obchod@molpir.com, www.molpir.com, www.shop.molpir.com

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/1100, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc, Holic, Česká republika, Tel.: 00420 585 315 017, Fax: 00420 585 315 021, e-mail: molpir_o@molpir.cz, www.molpir.cz


MOLPIR GROUP CZ a.s., Business centrum Klamovka, Plzeňská 155/113, 150 00 Praha 5 – Košíře, Tel.: 00420 724 606 000, e-mail: jsvoboda@molpir.cz, www.molpir.cz

IČO: 25828843, DIČ: CZ25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

NM_FMS037-H01IR_000_23012016_EN

Material required for installation

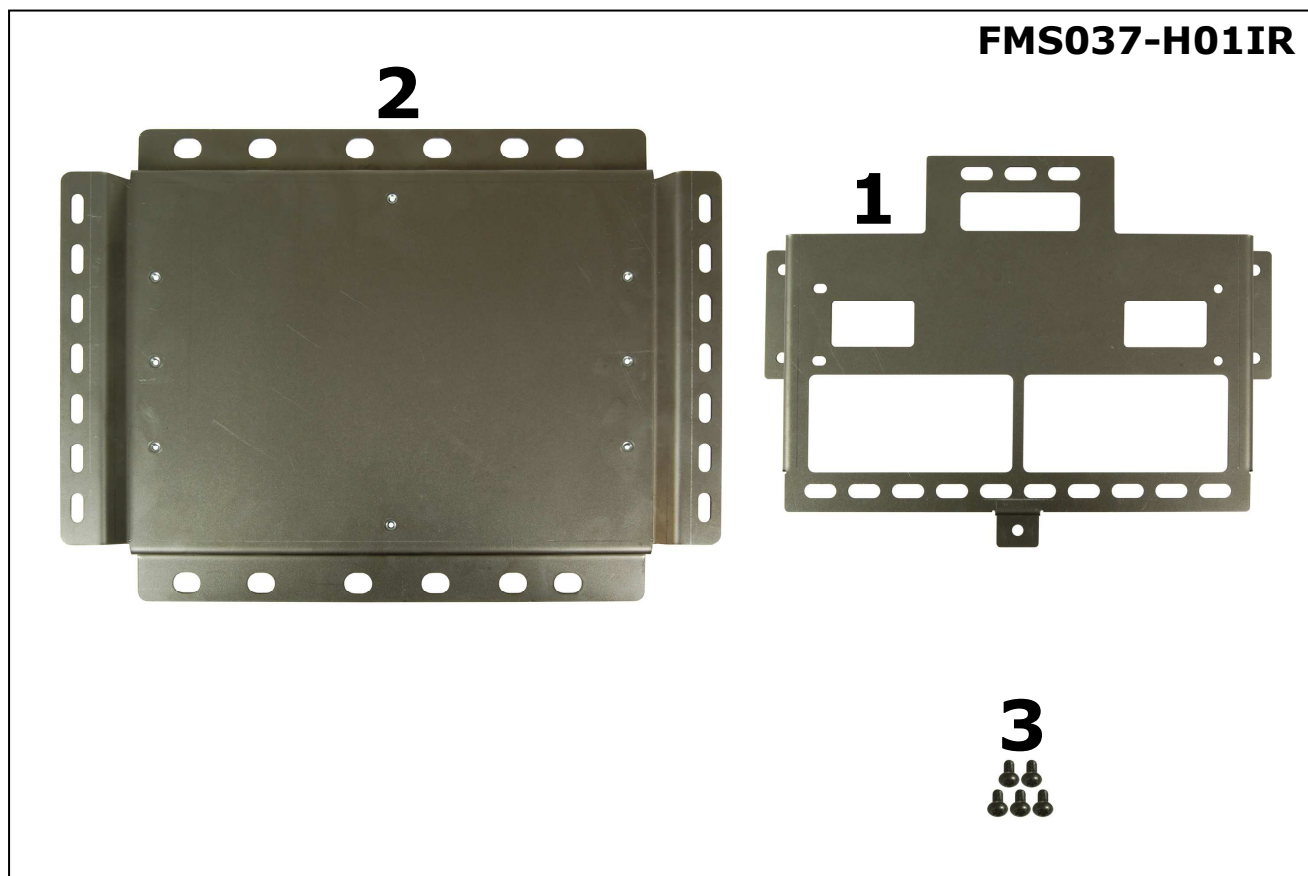

Pos.	Description	Code	Qty
1	Holder bracket for seat Irizar I8	0810646-M	1
2	Hub cover for seat Irizar I8	0810467-M	1
3	Screw M4x8mm with round head Torx 20 - black	104BN6404M4x8C	5

Table no.1

+ and the required quantity of cable ties



1. Construction of seat with mounted hub cover as advance preparation for installation

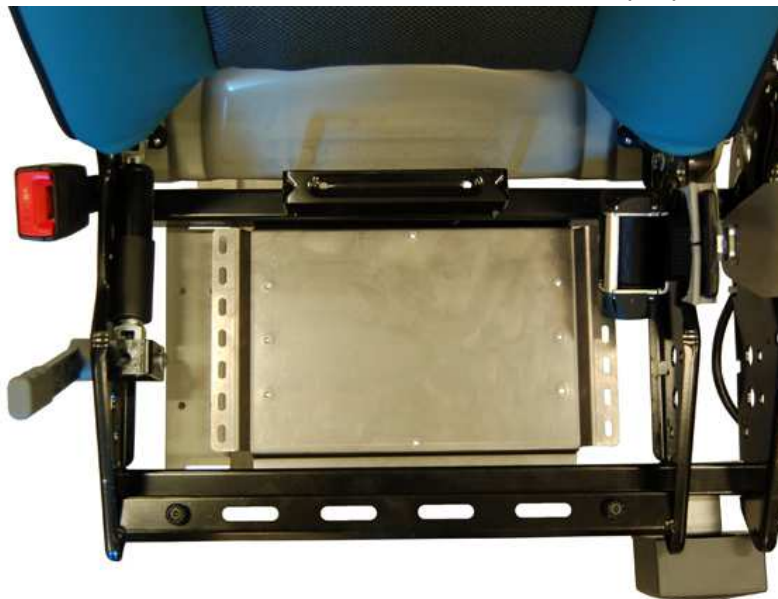


Figure no.1

2. On the bottom side of Hub FMS5718-01 loosen screws and remove the side brackets according figure no.2.



Figure no.2



Date: 23.01.2016

Page 3 of 6

Molpir s.r.o. sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.com, www.molpir.com, www.shop.molpir.com

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/1100, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc, Holic, Česká republika, Tel.: 00420 585 315 017, Fax: 00420 585 315 021, e-mail: molpir_o@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Business centrum Klamovka, Plzeňská 155/113, 150 00 Praha 5 – Košíře, Tel.: 00420 724 606 000, e-mail: jsvoboda@molpir.cz, www.molpir.cz

IČO: 25828843, DIČ: CZ25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

3. The loosen screws we will use for fitting on the bracket 0810646-M (table no.1, pos.no.1) according figure no.3



Figure no.3

4. With screws 104BN6404M4x8C (table no.1, pos.no.3) attached the set of Hub with the Hub cover on the five places according figure no.4.

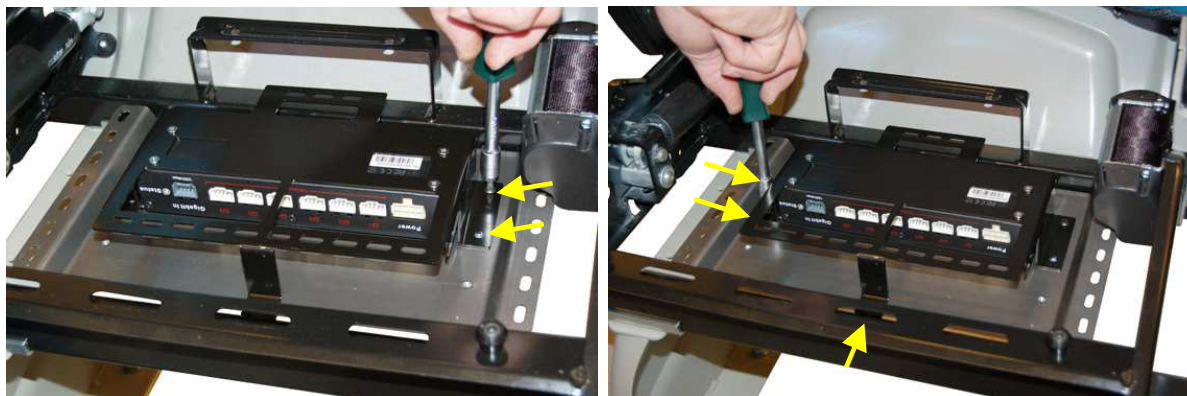


Figure no.4



5. Into the Hub connect each one connector and fasten them with the cable ties with bracket construction (**each cable separately!**). (according fig.no.6 and no.7)



Figure no.6



Figure no.7



6. If is Hub successful connected (MegaLan, GigaLan, power supply) and put all the wiring into the cable ducts then carefully fix end of the cable duct with insulation tape (according fig. no.8)



Figure no.8

7. And according figure no.9 put the cable duct to Hub bracket. Check, whether all cables are fasten to the seat construction (place marked with yellow arrow).

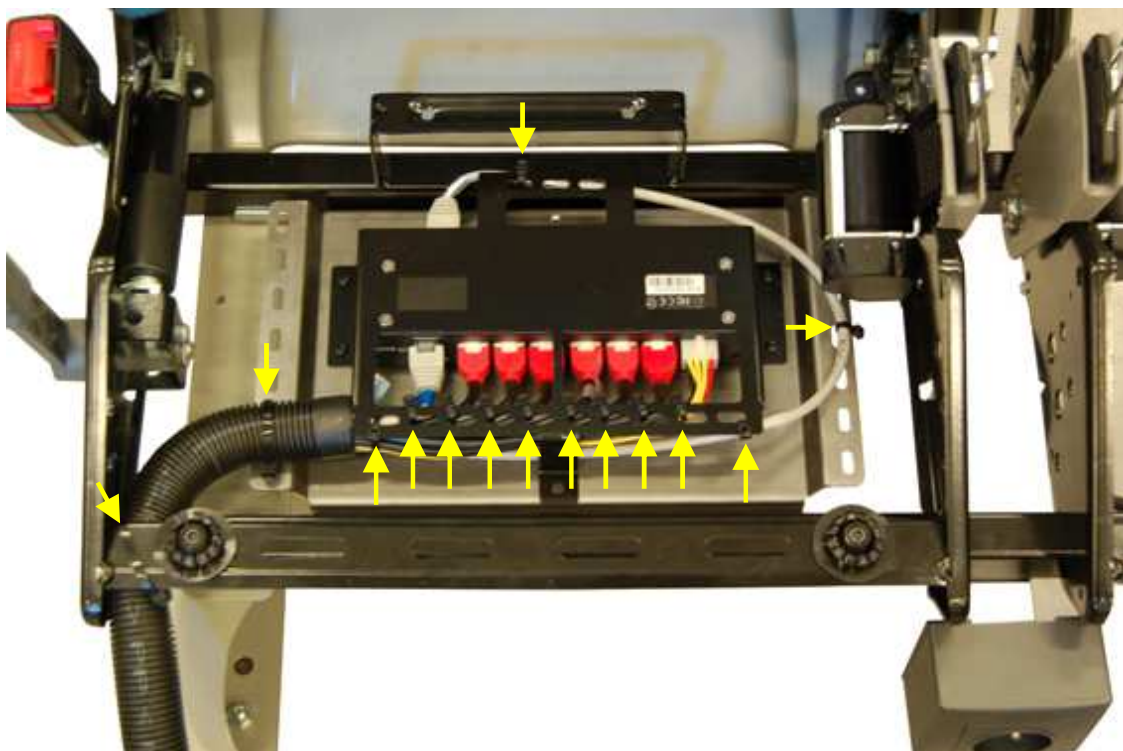


Figure no.9

